


e for optional towhook

set pushrods as far apart  
as possible here for  
battery access clearance

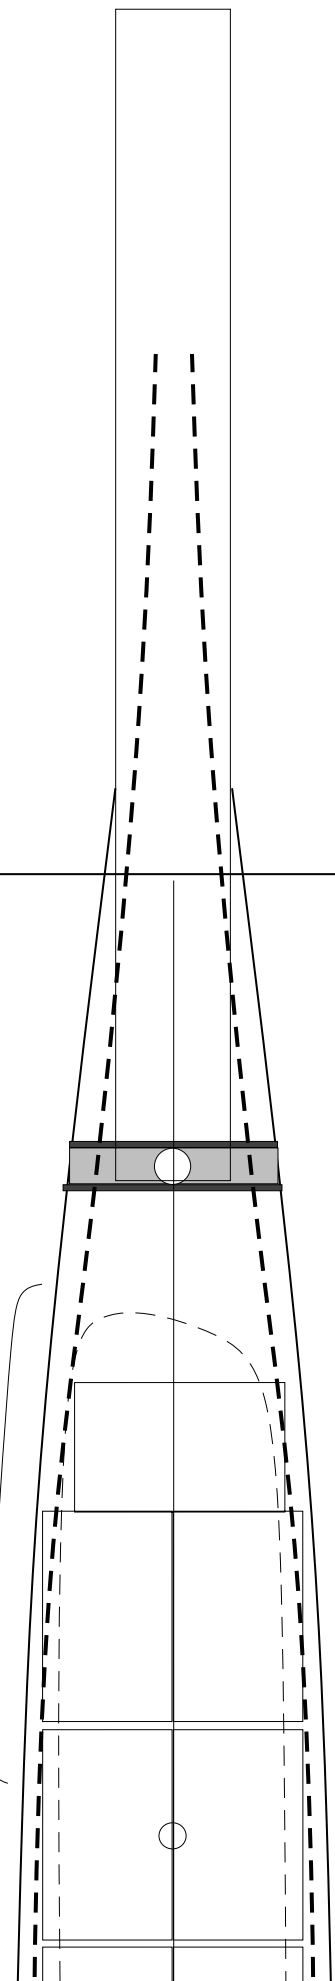

---